

## Microfiber Laundry Instructions - Using the SMARTCLEAN washing machine

### 1. Fill the SMARTCLEAN with CPI microfiber products

The washer must be loaded with the correct amount of microfiber and NOT BE OVERLOADED. If the washer is overloaded with too many products, it will not properly rinse the soil from the microfiber. Following are the maximum load levels for typical CPI microfiber products. A general rule of thumb is to load the washer 'loosely' by placing product in the washer drum, when product reaches the top of the SS metal drum, then it is full. Do not press the product down into the washer 'cramming' them in the drum.

- 18" wet mop = **25 mops**
- 16x16 Cloths = **50 cloths**
- 18" wet mop & 16x16 cloths = **12 mops + 24 cloths**
- 18" wet mop & 16x16 cloth & trowel pad = **12 mops + 12 cloths + 12 trowel pads**
- 18" wet mop & trowel pad = **12 mops + 24 trowel pads**

### 2. Switch ON the power supply

Plug the SMARTCLEAN power chord into the wall outlet (make sure to use a grounded outlet). Press the POWER button and the "FUZZY" indicator will light. It means that the washing machine will select the 'fuzzy' program, if you press down "START/PAUSE" button, the washing machine will automatically start running, it will select the exact water level, wash and spin time and water level according to the quantity and quality of the wash laundry itself.

If you don't want to use the FUZZY program, follow the next operation as shown in step 3.

### 3. Choose program

Press the "PROGRAM" button to choose the desired function. The indicator light will confirm your choice. Note: Press the "PROGRAM" button repeatedly to select different programs.

### 4. Choose function

Press the FUNCTION button to choose the appropriate function. The indicator light confirms the choice.

### 5. Choose the water level

Press the WATER LEVEL button to choose the appropriate water level according to wash quantity (see possible load combinations above). Indicator light confirms the choice.

### 6. Optional - Delay Function, done prior to steps below

Delay start function can start the program after a delay of chosen time. After completing above steps, press the "DELAY START" button [Digital indicator will start at one and go up in increments of one every time delay button is pushed. Number shown indicates desired delay (in hours) to delay start of wash.].

### 7. Add Microfiber cleaning detergent

Add applicable amount of CPI eMicrobrite microfiber cleaning detergent to 'Detergent Tray'. Do NOT use liquid fabric softeners or bleach to wash microfiber. Do not exceed 190°F of water temperature.

### 8. Start the washing machine

Press "START/PAUSE" button, the washing machine will buzz and run automatically. Close the lid, or the washing machine will not operate.

### 9. Place damp microfiber in Pre-treat bucket

Once the washing machine is finished, take out the damp microfiber items and place them directly in a Pre-Treat bucket to be treated with solution. If you do not desire to put them in the bucket, you can dry them in a dryer or hang the items to dry.

**750 i-fiber guaranteed processing cycles\*** – Pocket mops, hook & loop mops

**300 i-fiber guaranteed processing cycles\*** – Cloths, Dusters, Tab mops

\* =When following the proper laundry processing cycle.